

## Operation Manual ATTENTIONS

## **Battery and Charging:**

Charge at  $0^{\circ}C \sim 45^{\circ}C$  (32-113°F), discharge at  $-20^{\circ}C \sim 60^{\circ}C$  (68-140°F), keep the battery dry. Do not put the battery in acidic or alkaline liquid. Avoid rain and keep away from fire, heat and high temperature environment. It is strictly forbidden to connect the positive and negative poles of the battery reversely. It is strictly forbidden to damage, disassemble the battery or cause short-circuit. Please use the specific original charger for charging, with charging time no more than 7 hours and the charging current no larger than 2A. When not in use for a long time, please store the battery in a cool and dry place, and charge the battery for 5 hours every month. The user must follow the manual instructions when charging, otherwise the consequences will be at his own risk. Pay attention to the battery type and applicable voltage that the charger can charge, and it is strictly forbidden to mix. When charging, it should be placed in a ventilated environment. It is strictly forbidden to charge in residential buildings, enclosed spaces, or under sunshine and in high temperature environments. When charging, plug in the battery first, then connect to power supply socket; after charge gets full, cut off the socket first, and then unplug the battery. When the green light is on, the power supply should be cut off in time, and it is forbidden to connect the charger to the AC power supply for a long time without charging. During the charging process, if the indicator light is abnormal, there is a peculiar smell, or the charger casing is overheated, stop charging immediately, and repair or replace the charger. During the use and storage of the charger, pay attention to avoid foreign objects entering, especially water or other

liquids, so as to avoid a short circuit inside the charger. The charger should not be carried with the bike as much as possible. If it is necessary to carry it, it should be placed in the toolbox after the shock absorption treatment is done. Do not disassemble or replace the accessories in the charger by yourself.

#### **Ride:**

Do not use it until you read the instructions carefully and understand the performance of the product; do not lend it to people who can't manipulate the product for riding. Before riding the bicycle, check whether the brakes are working. When you brake, please activate the rear brake firstly, and then the front brake. Pay attention to the brake tightness. If the brake is too loose, use an Allen key to tighten it. Pay attention to increasing the braking distance when riding in rain or snow. Suitable age: Riding between 16 and 65 years old. Please be sure to wear a safety helmet when riding the ebike, follow the traffic rules, and do not drive on motorized lanes and roads with many pedestrians. Please check the tire pressure before riding. The recommended tire pressure is 35~45PSI. When riding on downhill and non-paved roads, make sure the speed do not exceed 15km/h (9.3mph). When using the motor, please be careful not to hit it vigorously and keep the rotating shaft lubricated. It is not allowed to ride with more than the maximum load of the body (the maximum load is 120 KG, 265lbs) After use, the bike can not be parked in the building hall, evacuation stairs, safety exits, and must be parked correctly in accordance with the safety rules.

### Liability statement:

After riding, please store the bike in a place without sunlight and rain, not in a residential building; Regularly check the motor and brake;

Regularly check bike's screw, especially those need to be tightened, and tighten them regularly. Recommended torque: (unit: kgf. cm) Steering handlebar screws 60-80, stem screws 175 ~ 200, seat cushion screws 175 ~ 200, wheel screws 320 ~ 450; The front and rear wheels of the ebike should align with the central axis of the front fork or frame; Regularly check if there is scratches, cracks or excessive wear in tires. The inner tube and valve should be perpendicular to the wheel hub and not crooked. Damaged or excessively worn tires need to be replaced immediately, please find a professional technician to replace your tires, if your tires accidentally puncture and leak, please contact a professional technician for repair or replacement.

### Maintenance:

The company reserves the right to modify and interpret the product models, specifications or related information mentioned in this manual;The functions of a specific model mentioned in this user manual are only applicable to that specific model;The product models, specifications or related information mentioned in this user manual are subject to any modification or change without prior notice;Without the prior written permission of the company, the contents of this manual may not be copied, modified, reproduced, transmitted or published in any form. Please read this manual carefully before using the product, and operate in accordance with the manual, otherwise the company will not be responsible for product damage or personal and property damage caused by improper use or mistakes.

## **PRODUCT FUNCTION DIAGRAM**



1 Display 2 Handbar 3 Break bar 4 Riser 5 Front light 6 Front fork 7 Wheel 8 Wheel reflector 9 Brakes disc pad 10 Brakes disc 11 battery 12 Pedal 13 Sprocket 14 chain 15 Rear derailleur 16 Motor Flywheel 17 Seat tube clamp 18 Tail light 19 Seat tube 20 Saddle

## **Function introduction:**

1.Charging: unscrew (Picture 1) the plastic cover on the battery , connect the charger, start charging, when the battery power is full and the indicator light of the charger turns from red to green, it is fully charged.







Figure 2





2. Power on: Refer to Figure 1, turn on the battery switch as the blue arrow points: Refer to Figure 3, long



key to power on/off.

3.Power display: The instrument panel lights up after power on to display the power, it is displayed in 5 grids, corresponding to high, medium and low power.

4.Headlight: long press the "+" key to turn on/off the headlight as shown in Figure 3.

5. Headlight: long press the



key to turn on/off the headlight as shown in Figure 3  $_{\circ}$ 

6. Start: power-assisted riding, short press to adjust to 1st gear after power on, step on the bicycle sprocket, start motor to assist. If motor assistance is not required, turn off the power or set the gear to 0.

# **PRODUCT PARAMETERS**

	Parameter	Standard Version			
Outlook &Dimension	Body Material	Steel			
	Color	Black			
	Unfolding Size	1880mm*600mm*1030mm			
	Packing Size	1550mm*310mm*800mm			
	Hub Form	Spoke wheel			
	Wheel Size	26*4.0 inches			
	Gross weight /Net weight	35.4kgs/28.9kgs			
	Maximum Load	120kg			
	Maximum Speed	25Km/h (15.6mph)			
Performance Parameters	Mileage	35km max rang in electric mode (21.8mile)			
	Maximum Climbing Angle	25 degree			
	Proper Temperature	-10°C-45 °C (14°F-113°F)			
	Waterproof Level	IP54			
	Battery Type	18650 lithium ion power battery			
	Battery Capacity	17 AH			
	Battery Rated Voltage	48V			
	Motor Form	Assist mode			
	Motor Type	26" High speed gear/ Integrated wheel brushless motor			
Electrical	Motor Rated No-Load Speed	310±10r/min			
Specifications	Charger Output	54.6V 2.0A			
	Charger Input	100~240V 50/60Hz 3.0A			
	Under voltage Protection Value	39V			
	Over current Protection Value	2.5A±1A			
	Charging Time	6.5-7 hours			
	Instrument Display	Multifunctional LCD screen			
	Front Lighting	YES			
	Braking Method	Front disc brake + Rear disc brake			
Factures		Pneumatic tires			
Features	Tire Specifications	Tire: 26 x4.0			
		Air Valve:26 x4.0, the inner tube valve is AV			
	Front Fork	Shock absorbing front fork			
	Gear	7 Speeds transmission			

Remarks: The factors, including battery power capacity, load, tire pressure, road conditions, chain and lubrication between wheel and axle, etc. will affect the maximum speed; the cruising distance indicated in this manual file is the test result from the riding test conducted uninterruptedly with load of 60kg(132lbs), at the speed of 15-25km/h (9.3-20mile/h for US), and on the flat and

hardened road surface, from full charge to full power consumption.; Driving habits, temperature, load, tire pressure, road condition and other factors will affect the actual cruising distance.

# MANUAL CONTROL INSTRUMENT





## **—**、 Function description :


**1.** Display function

Speed display, power assist display, power indicator, fault prompt, mileage display, voltage display, single boot time, 6km/h (3.75mile/h) boost, brake indication, headlight display

## 2. Control, set function

Power switch control, headlight switch control, 6km/h (3.75mile/h) booster setting (WALK mode), 3-speed booster ratio setting, speed display switching, mileage and single boot time and voltage display switching.


3. All contents of the display screen (full display within 1s after booting)

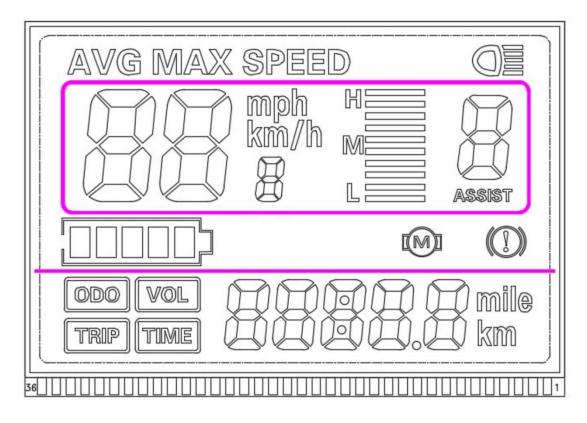

Function description

	Γ	
1. Voltage status level POWER	L	

## 2. Multifunctional display description

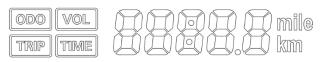


Total mileage ODO, single mileage TRIP (unit: mile, km), single boot TIME time, battery voltage VOL



3.Speed display area


AVG : Average SPEED, MAX: maximum speed, SPEED: current speed; unit Mp/h, km/h

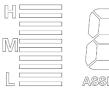

ASSIST ,0-3 digital display and gear

4 . Vehicle power gear adjustment bar display;

5. Vehicle status display area

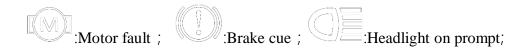

5. Button Introduction :

Status Code	State Meaning
E00	Normal Status
E06	Battery Under voltage
E07	Motor Failure
E08	Throttle Failure
E09	Controller Failure

E10	Communication Reception Failure
E11	Communication Sending Failure

## $\Box$ **Button Introduction** :

The specific combination of buttons is as follows



Use Introduction Button operation is divided into short press and long press.

## Specific operation explanation:

## I, Switch LCD

- In the off state, long press the "ن" button to turn it on.
  In the power-on state, long press the "ن" button to turn it off.

## II, Change the assist gear in power-on state

- Short press the """ button to turn it on, assist gear will be + 1. 1.
- Short press the "也" button to turn it on, assist gear will be -1. 2.

## III、 Switch speed display area content

1. When the device is on, press and hold and button , Can complete the

average speed, maximum speed, instantaneous speed between the display switch

IV、 Set/remove 6Km/h(3.75mph) boost and switch headlights

button, It will enter a 1.When the vehicle is stationary, press and hold 6KM/h(3.75mph) boost cruise mode. Pinch any brake to exit this mode.

2. Tap and hold button, Turn on or off headlights.

V. Switch the contents of the multi-function display area



1. When the device is on, tap button , switch to the multifunction area to display

data.

## Note:

1. Due to the upgrade of the company's products, the display content of the product you get may be different from the manual, but it will not affect your normal use. Everything is subject to the real object, and the company reserves the right of final interpretation.

2. The parameter settings of the instrument have been set at the factory. Please operate according to the instructions in the manual, and do not change the original settings of the instrument .The company is not responsible for any abnormal function or function damage caused by not following the instructions in the manual.

3. Do not immerse the instrument in water, or use a waterjet to clean the display. When cleaning, wipe with a soft cloth dampened with water. Do not wipe with any cleaning agent.

4. Do not dispose of the instrument or any other E-bike accessories as resident waste. Please comply with local laws and regulations and dispose of or recycle Ebike accessories in an environmentally friendly manner.